










Installation guide

ProBox 204B

Dimensions

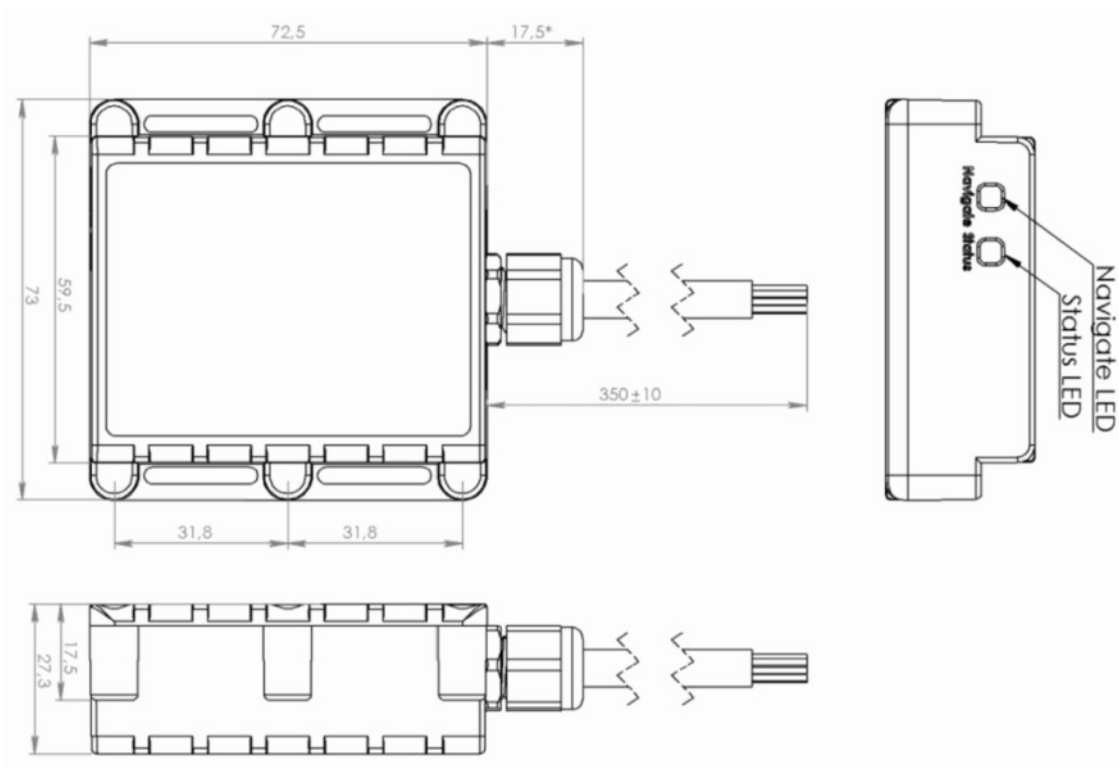


Inserting SIM card

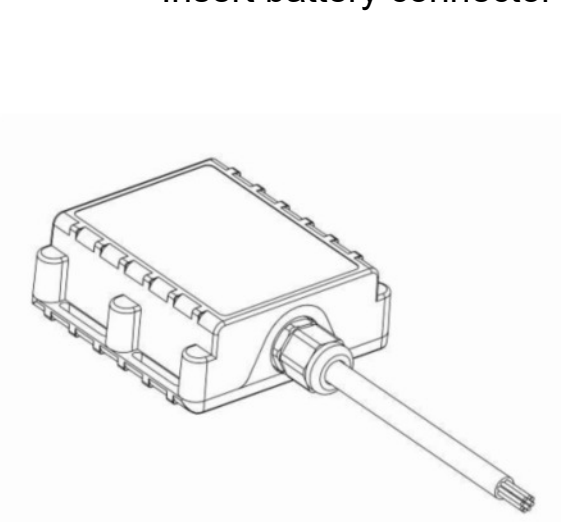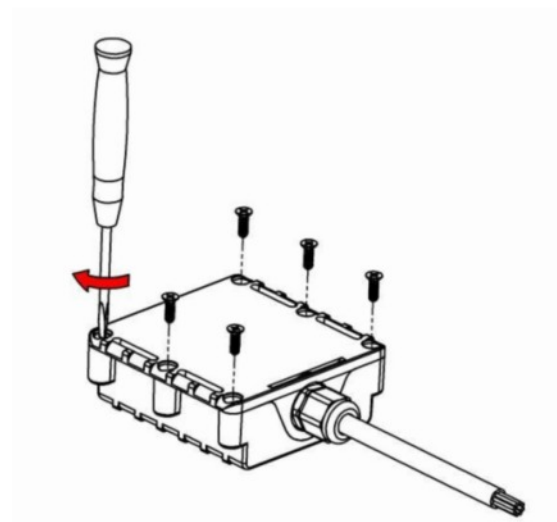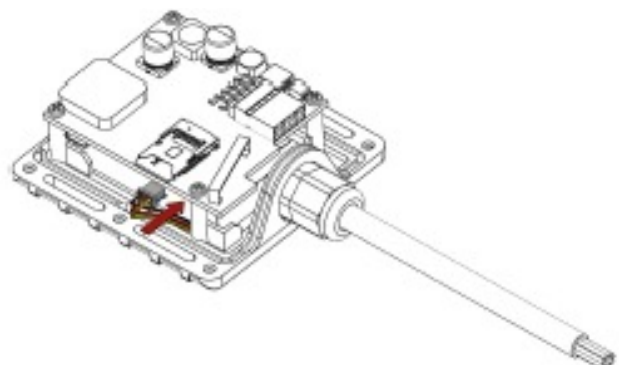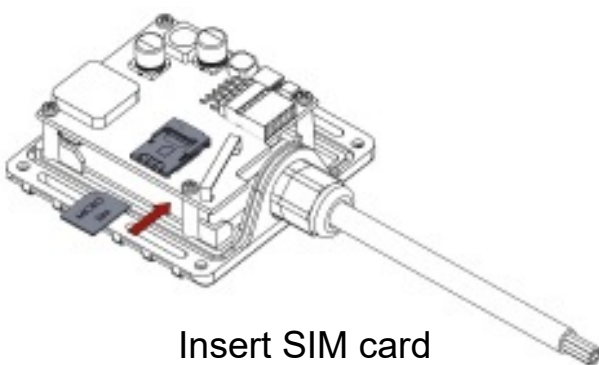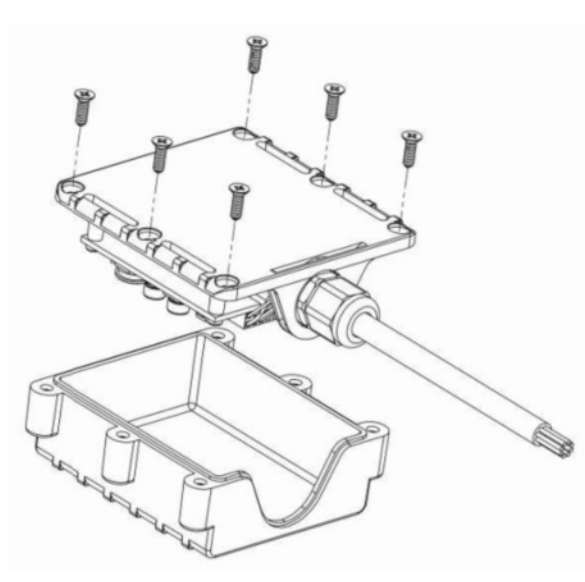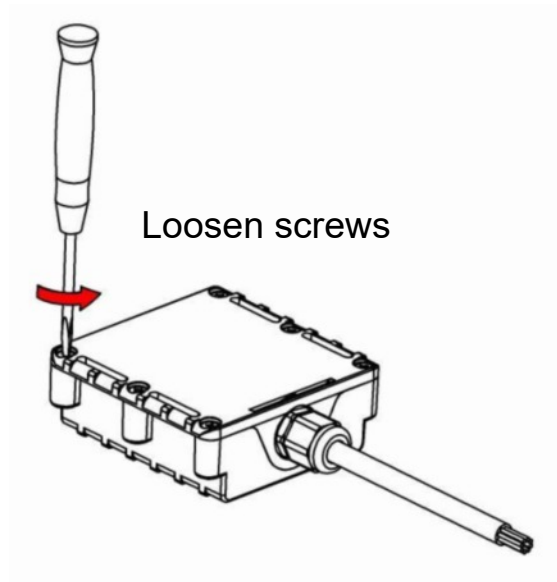



Antenna

The GPS antenna is located on the top (big flat surface) of the cabinet.


To obtain the optimum installation, please install the cabinet with the big flat surface up as shown below, and in the green area.

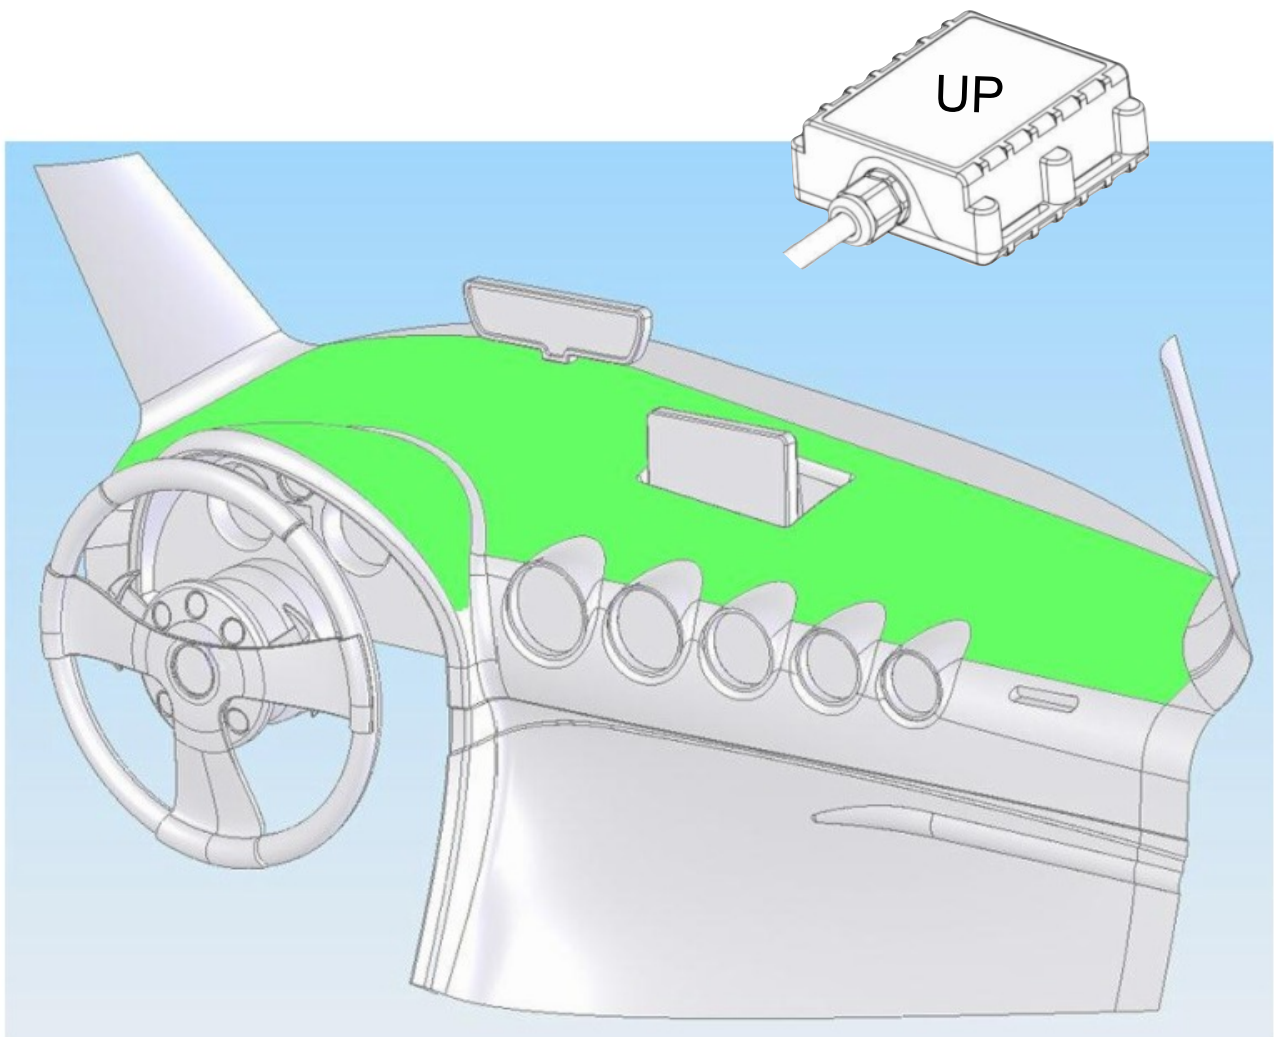


Cabling

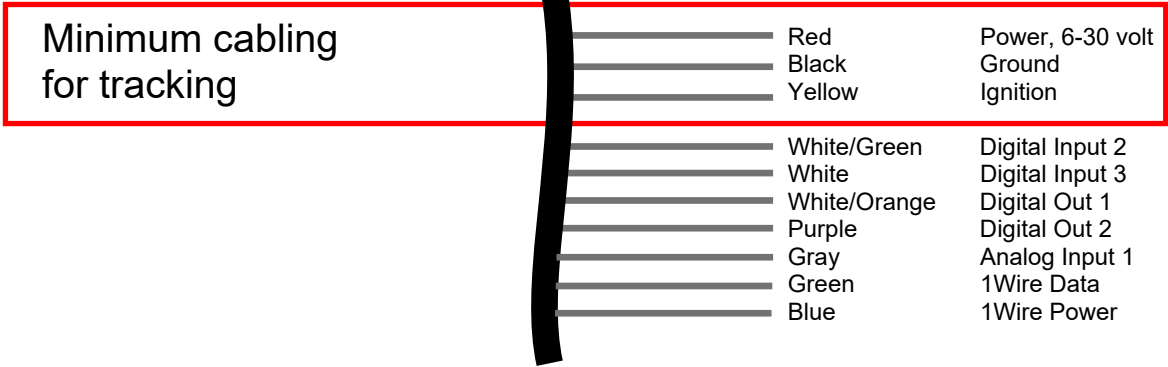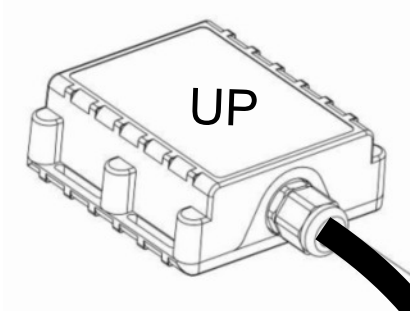



Minimum cabling for tracking

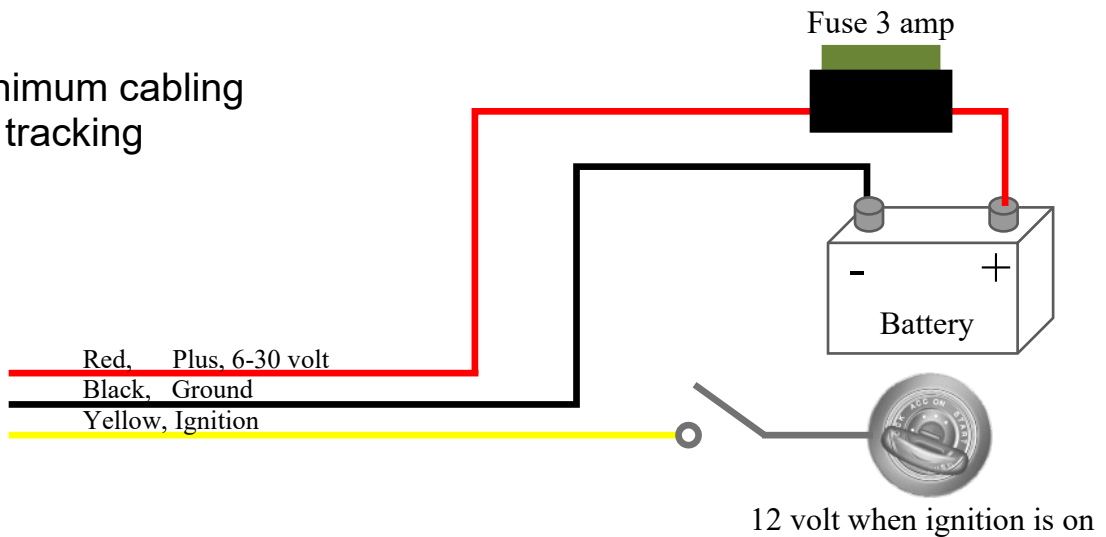

1-wire connection Driver RFID login

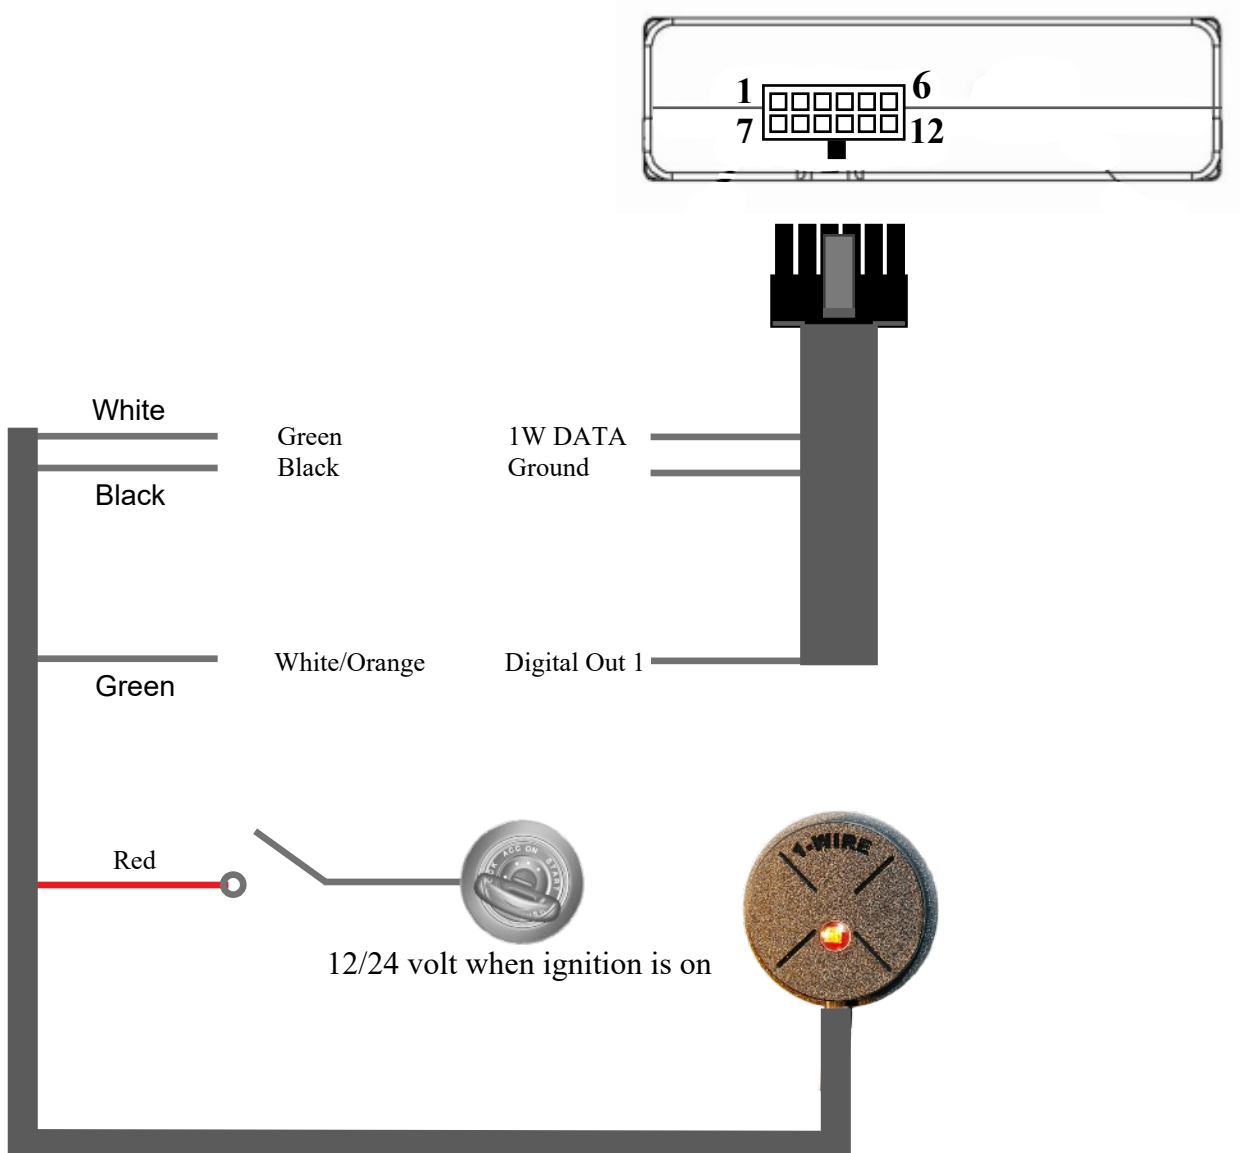



1 Wire Temperature Sensor

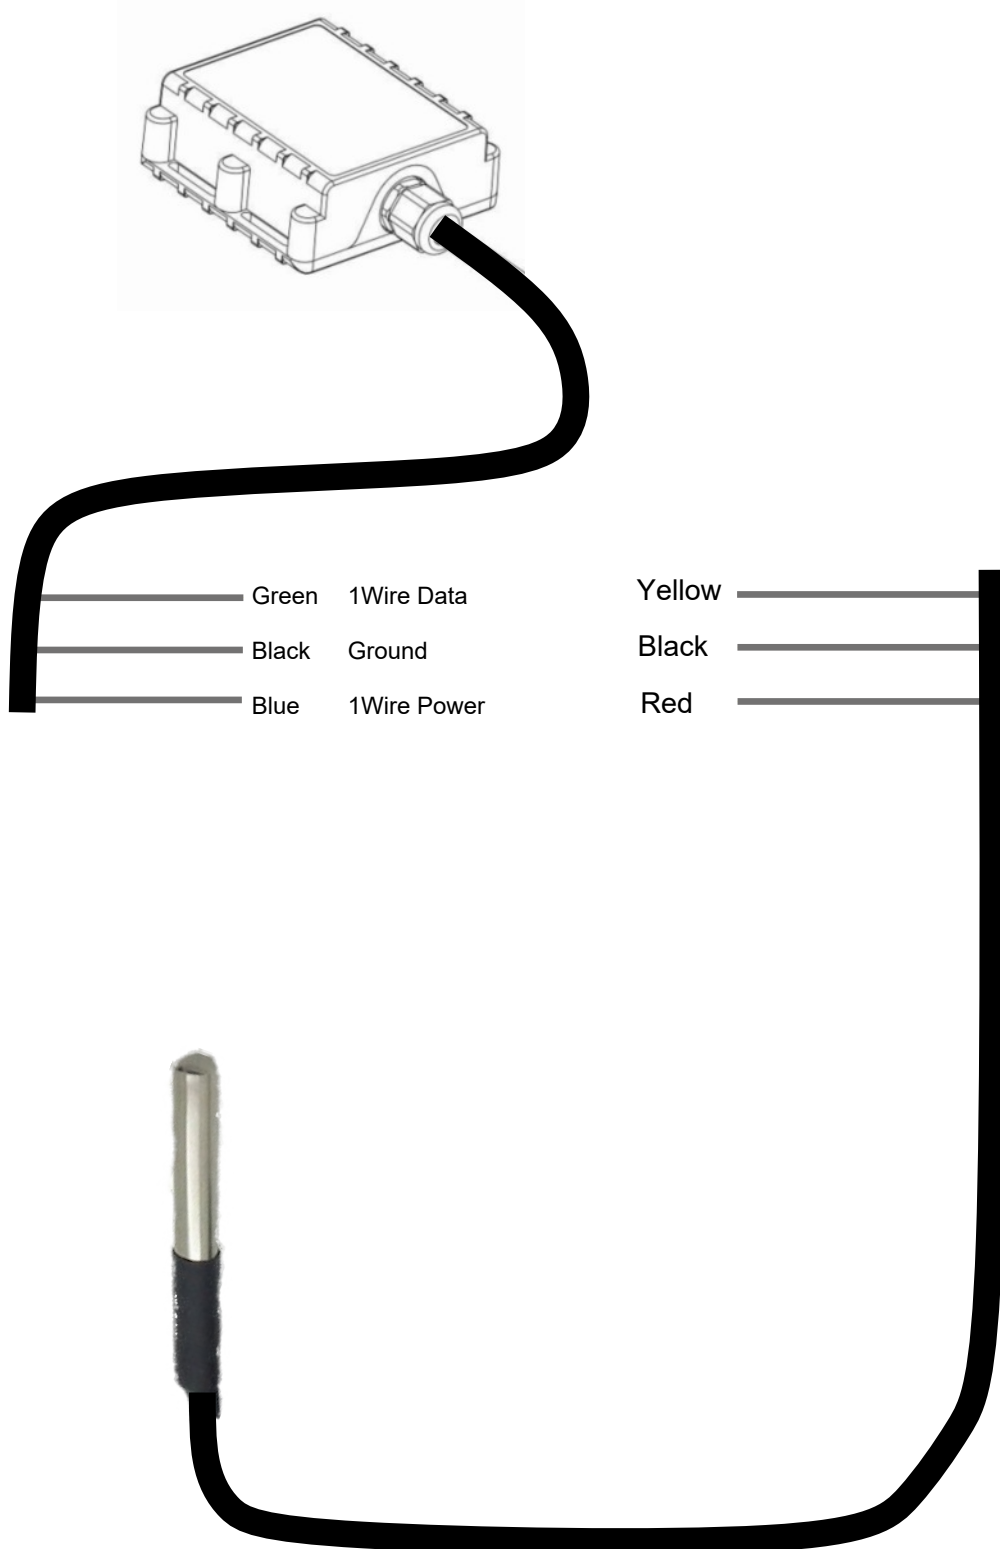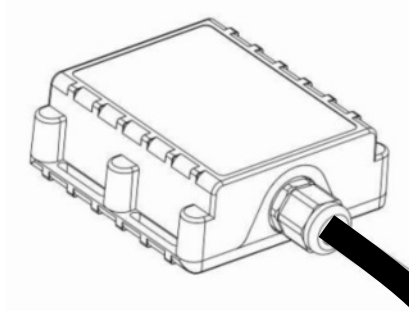


Engine Blocking

ATTENTION:

Be sure to use suitable relay for each installation.
Incorrect relay can result in damage to vehicle and / or tracking box.

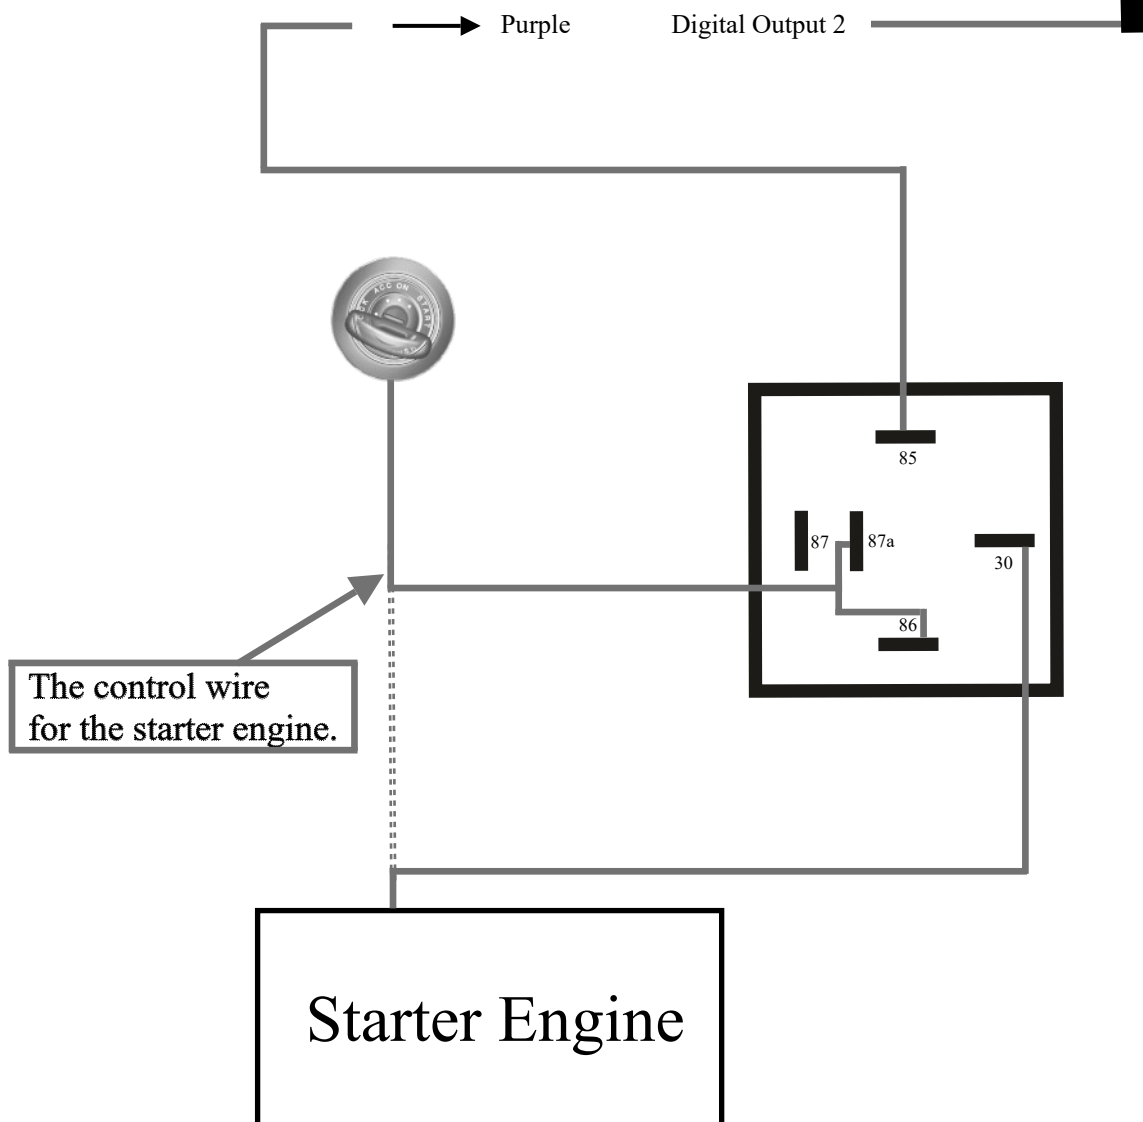
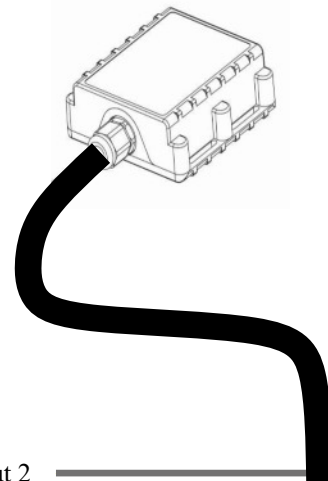


LED's

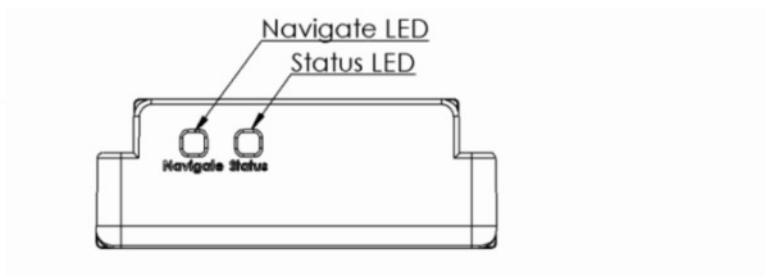

NAVIGATE LED

STATUS LED

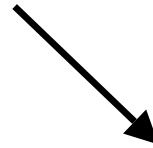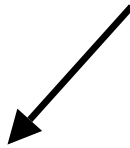

One blink every second = Normal mode

Permanently On = GPS NOT received

Permanently Off = Deep sleep
or
Antenna defective

One blink every second = Normal mode

One blink every 2 seconds = Deep sleep

Blinking fast = Boot/Mode activity

Permanently Off = Device not working
Device not powered